

# Panasonic®

Operating Instructions  
使用说明书

Rechargeable Shaver  
充电式 电动剃须刀

Model No. ES6510  
型号 ES6510

English	2
中文	7
保修证	14



Before operating this unit, please read these instructions completely and save them.

操作本产品前请阅读全部说明并妥善保管。

## Safety instructions

- Be sure to remove the plug from the power outlet before maintenance.
  - Failure to do so may result in electric shock.
- Never insert the plug into or remove it from the power outlet with wet hands.
  - It could result in electric shock.
- Never wet the appliance, splash water on it or wash it with water.
  - It could result in electric shock or shorting.
- Never charge or use the appliance in the bath or shower room.
  - It could result in electric shock, fire or shorting.
- Always ensure the appliance is operated on an electric power source matched to its rated voltage.
  - Failure to do so may result in fire or electric shock.
- Do not alter the appliance. Also, do not disassemble or repair it.
  - It could result in fire, electric shock or injury. Contact the shop where you purchased the appliance or your nearest service center for repairs.
- Before use, always make sure that the foil has not become damaged or misshapen.
  - Failure to do so may cause damage to skin.
- Do not apply excessive pressure to the foil.
  - It could break the foil, resulting in scratching of the skin.
- Do not use the appliance for any purpose other than shaving.
  - It could break or deform the foil, resulting in scratching of the skin.
- Be sure to remove the plug from the power outlet when not charging.
  - Failure to do so may result in electrical fire due to insulation deterioration.

**WARNING - Keep the appliance dry.**



### SPECIFICATIONS

Model: ES6510

Rated input: a.c 220 V, 15 mA

Motor voltage: d.c 1.2 V

Charging time: 8 hours


This product is intended for household use only.

- The unit is applied to the Chinese standard GB4706.1 appendix B and GB4706.9.

English

## Parts identification


- ① Protective cap
- ② Tab
- ③ Outer foil
- ④ Inner blade
- ⑤ Inner blade block
- ⑥ Switch lock button
- ⑦ Switch
- ⑧ Plug
- ⑨ Plug handle
- ⑩ Cleaning brush

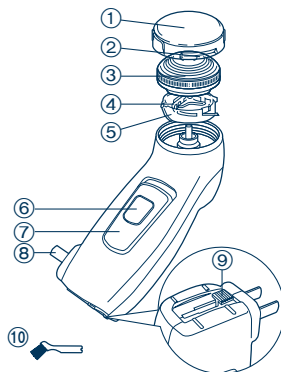

## Charging


### 1 Slide the switch to "0•CHARGE".

- The shaver is not charged when the switch is set to "1".

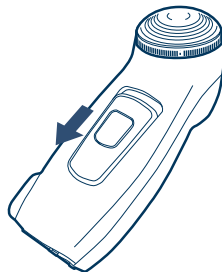

### 2 Push out the plug.


- Slide the plug forward and out while pressing the plug handle.



3


### 3 Plug in the appliance to the power outlet.

- Charge the shaver for 8 hours.
- A full charge supplies enough power for about 7 shaves of 3 minutes each.

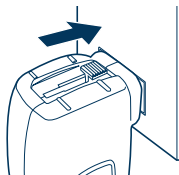


### 4 Disconnect the plug after charging.

- Charge the shaver for at least 16 hours before using it for the first time or when it has not been in use for more than 6 months.
- Charge the shaver where the temperature is above 0 °C or below 40 °C.

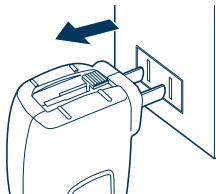


### 5 Slide the plug while pressing the plug handle.

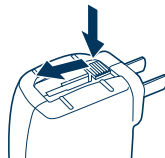

## Using

- 1 Remove the protective cap while pressing the tabs.
- 2 Check that the outer foil is not deformed or damaged.
- 3 Slide the switch to "1" while pressing the switch lock button.

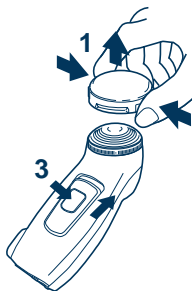

Stretch your skin with your free hand and move the shaver back and forth in the direction of your beard.

- Attach the protective cap to prevent the damage of the outer foil after use.

English

## Cleaning with the brush

- 1 Remove the outer foil and the inner blade block from the main body.**

- 2 Remove the inner blade block from the outer foil.**

Grasp the center axis of the inner blade block and pull it straight up.

- Incline the inner blade block to one side when it cannot be removed.

- 3 Cleaning with the brush as illustrated.**



Outer foil



Inner blade block



Do not apply excessive pressure when cleaning the inner blade block. The inner blade may be removed from the inner blade block.


Main body



## Removing the built-in rechargeable battery

Remove the built-in rechargeable battery before disposing of the shaver. Please make sure that the battery is disposed of at an officially designated location if there is one. Do not dismantle or replace the battery so that you can use the shaver again. This could cause fire or an electric shock. Replace it at an authorized service center.

- Remove the plug from the power outlet when removing the battery.
- Perform steps ① to ⑧ and remove the battery.

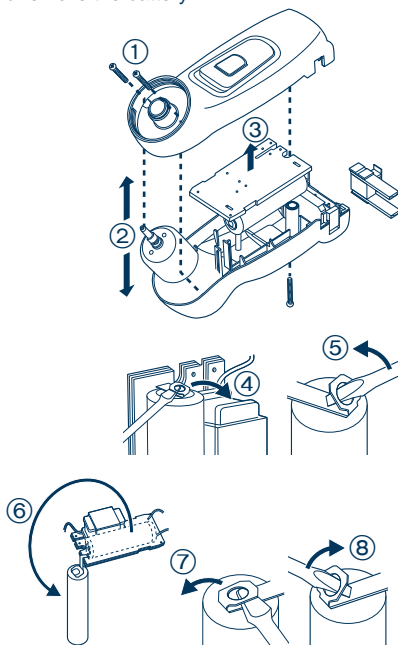

### For environmental protection and recycling of materials

This shaver contains a Ni-MH battery.

Please make sure that the battery is disposed of at an officially assigned location, if there is one in your country.

## 安全须知

- 请确保在保养前从电源插座上拔下插头。
  - 否则，可能会导致触电。
- 切勿用湿手将插头插入到电源插座中或从电源插座上拔下插头。
  - 否则，可能会导致触电。
- 切勿弄湿该电器、将水溅到该电器上或用水冲洗该电器。
  - 否则，可能会导致触电或短路。
- 切勿在浴室或淋浴室给该电器充电或使用该电器。
  - 否则，可能会导致触电、火灾或短路。
- 请始终确保该电器是在与其额定电压相匹配的电源上工作。
  - 否则，可能会导致火灾或触电。
- 请勿改动该电器。此外，请勿对其进行拆卸或维修。
  - 否则，可能会导致火灾、触电或伤害。请联系您购买该电器时的商店或离您最近的服务中心进行维修。
- 使用之前，请始终确保刀网没有受损或变形。
  - 否则，可能会造成皮肤伤害。
- 请勿对刀网施加过多的压力。
  - 否则，可能会损坏刀网，从而导致皮肤刮伤。
- 请勿将该电器用于剃须以外的任何其他用途。
  - 否则，可能会损坏刀网或使刀网变形，从而导致皮肤刮伤。
- 不充电时，请确保从电源插座上拔下插头。
  - 否则，可能会由于绝缘劣化而导致电气火灾。

**警告 - 请保持电器干燥。**



### 规格

型号: ES6510

额定输入: 交流220V, 15mA

马达电压: 直流1.2V


充电时间: 8小时

本产品仅限家庭使用。

- 本产品符合中国标准GB4706.1附录B和GB4706.9。


## 各部分名称

- ① 保护盖
- ② 释放按钮
- ③ 外刀网
- ④ 内刀头
- ⑤ 内刀头的固定架
- ⑥ 开关锁定按钮
- ⑦ 开关
- ⑧ 插头
- ⑨ 插头手柄
- ⑩ 清洁刷

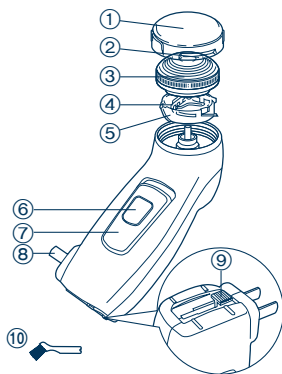


## 充电

- 1 将开关滑动到“0 • CHARGE”。**
  - 开关设置到“1”时，剃须刀不被充电。

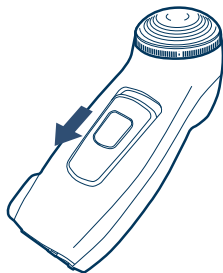


- 2 推出插头。**
  - 在按下插头手柄的同时向前滑出插头。






### 3 将该电器插入到电源插座中。

- 给剃须刀充电8小时。
- 一次完全充电可提供大约7次剃须（一次剃须约为3分钟）所需的电量。

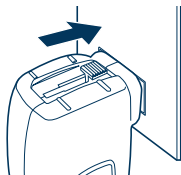


### 4 请在充电后拔下插头。

- 第一次使用前或超过6个月未使用剃须刀时，至少要给剃须刀充电16小时。
- 请在温度介于0℃以上或40℃以下的情况下给剃须刀充电。

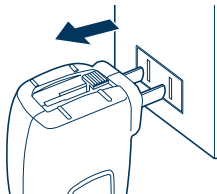


### 5 在按下插头手柄的同时滑动插头。

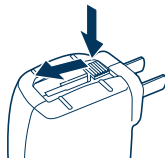

## 使用剃须刀

- 1** 在按下释放按钮的同时取下保护盖。
- 2** 请确认外刀网没有变形或受损。
- 3** 在按下开关锁定按钮的同时将开关滑动到“1”。

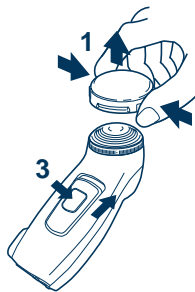

用另一只手绷紧脸上皮肤，逆着胡须生长方向前后移动剃须刀。

- 使用后，请装上保护盖，以防止损坏外刀网。

## 使用刷子清洁

**1** 从主机上取下外刀网和内刀头的固定架。

**2** 从外刀网上取下内刀头的固定架。

捏住内刀头的固定架的中心轴竖直拔起。

• 无法取下时，请将内刀头的固定架倾斜到一侧。

**3** 如图所示那样使用刷子清洁。



外刀网



内刀头的固定架



清洁内刀头的固定架时，  
请勿过度用力。  
内刀头可能会与内刀头的  
固定架分开。


主机



## 取出内置的可充电电池

在丢弃剃须刀前，请将内置的可充电电池取出。如果有官方指定的抛弃地点，请确保将电池丢弃在那里。为了可以再次使用剃须刀，请勿分解或更换电池。这样可能会导致火灾或触电。请在授权服务中心更换电池。

- 在取出电池前，请从电源插座上拔下插头。
- 执行步骤①至⑧取出电池。

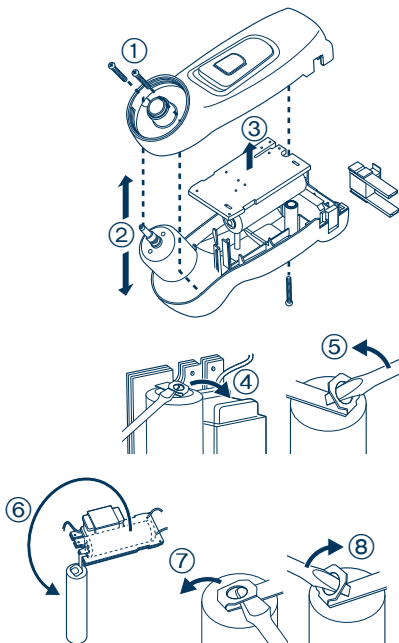

### 环境保护与资源回收

此剃须刀使用Ni-MH（镍氢）电池。

如果您所在的地区有官方指定的抛弃地点，请确保将电池丢弃在那里。





## 保修证

### 保修条款

有关保修期内Panasonic商品的保修（无偿修理），自购入之日起开始实施。

1. 保修期内的商品只可在松下维修店进行保修；保修时，请出示本保修证及购机发票。

以下两点需特别注意：

- a. 本保修证遗失后不再补发，请妥善保管；
  - b. 本保修证仅限于中华人民共和国国内有效（但香港、澳门、台湾三地区暂不可使用）。
2. 自购入之日起在以下期间内，正常使用中发生故障时进行保修。
    - a. 整机（除刀头、刀网、替刃、修剪刀外）2年内无偿；
    - b. 专业理发器6个月内无偿；
    - c. 附件：刀头、刀网、替刃、修剪刀有偿提供（不在保修范围内）。
  3. 属下列情况之一者，即使在保修期内，也不能以保修对待，但是可以实行收费修理：
    - a. 未按商品使用说明要求使用、维护、保管而造成损坏的；
    - b. 因不正确操作、电源不正常、破损（如：摔落等）而造成损坏的；
    - c. 不经松下认定维修店维修人员拆动造成损坏的；
    - d. 不能出示本保修证及有效购机发票的；
    - e. 保修证上记录的信息与商品实物标识不符或者涂改的；
    - f. 因不可抗力因素（如雷电、地震、火灾、水灾等）造成损坏的。
  4. 本保修条款只适用于消费者个人为生活需要而购买使用的场合，不适用于经营性等使用。

松下电器免费顾客咨询服务中心：800-810-0781

手机/小灵通/未开通800业务地区：400-810-0781

松下电器网站：<http://panasonic.cn>

松下电器（中国）有限公司



## 充电式 电动剃须刀保修证

### 销售店纪录

商品名称	充电式 电动剃须刀	商品型号	ES6510
机身号码		购买日期	
顾客姓名		联系电话	
顾客地址			
销售店名称		销售店电话	
销售店地址			

### 维修记录

维修店名称		联系电话		送修日	
销售店地址					
故障内容		故障原因			
维修内容		维修员签字			
维修店名称		联系电话		送修日	
销售店地址					
故障内容		故障原因			
维修内容		维修员签字			
维修店名称		联系电话		送修日	
销售店地址					
故障内容		故障原因			
维修内容		维修员签字			



**大连松下电工有限公司**  
**Panasonic Electric Works (Dalian) Co.,Ltd**

工厂地址：大连市甘井子区辛寨子东街15号  
(Address): NO.15 East street of Xinzhaizi, Ganjingzi section  
Dalian, Liaoning province  
电话(Tel): 0411-86313942  
传真(Fax): 0411-86313941  
邮政编码(Post Code): 116033  
原产地：中国

No.1 EN, CH (2008-1-00)

中国印刷  
Printed in China

